ER-REBOA™ PLUS Catheter Quick Reference Guide

"No One Should Bleed To Death"

PRYTIME MEDICAL™
The REBOA Company™
www.prytimemedical.com

Prepare Catheter

Confirm 7Fr Sheath

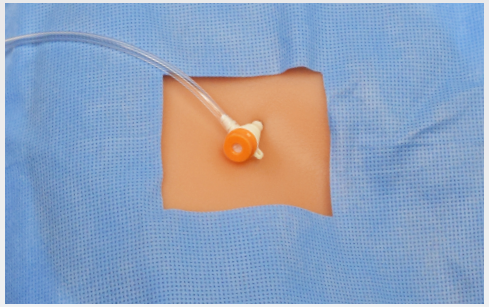

- Ensure compatible 7Fr sheath has been placed for arterial access

Prep BAL Line

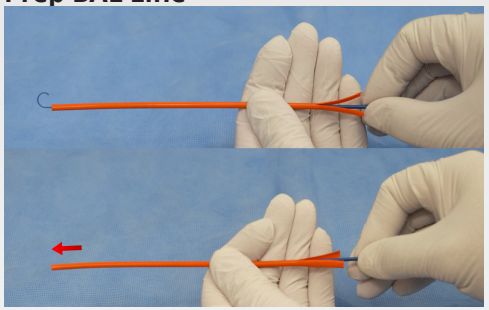

- Pull vacuum on BAL line and close stopcock
- Advance orange peel-away further to straighten and cover P-tip™

Flush ART Line

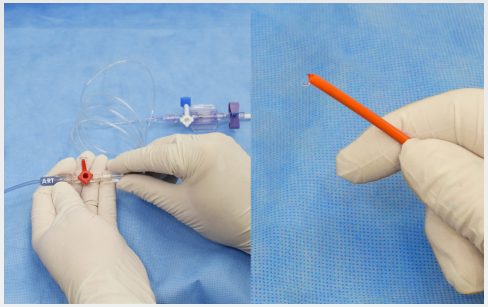

- Flush ART line of catheter

Determine Zone

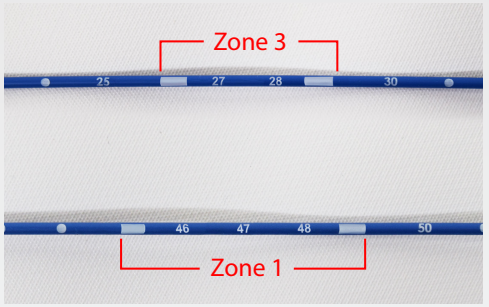

- Confirm Zone 1 or Zone 3 target for catheter placement
- Zone 1 ~ 46 cm & Zone 3 ~ 28 cm

Perform REBOA

Insert

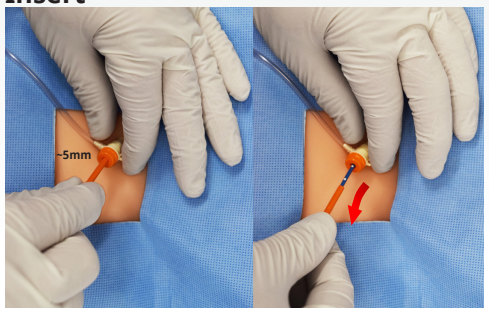

- Insert orange peel-away into valve ~5mm
- Advance catheter to zone, slide orange peel-away down as needed

Confirm Placement

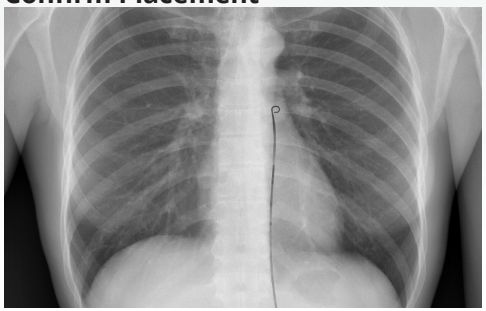

- If available, use X-ray or fluoroscopy to confirm placement
- Use radiopaque markers as balloon placement reference

Inflate and Monitor

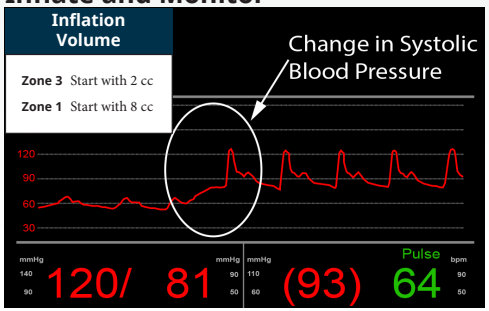

- **"Start 2, Start 8, then check"**
- Inflate balloon to occlusion
- Monitor blood pressure, watch for increase

Secure

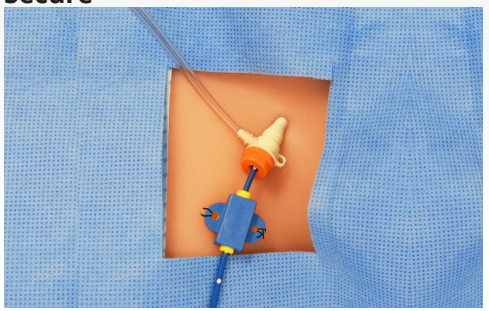

- Secure catheter close to the introducer sheath

Resuscitation and Definitive Care

Provide Definitive Care

- The clock is ticking
- Move quickly to definitive control

Deflate Balloon & Monitor Patient

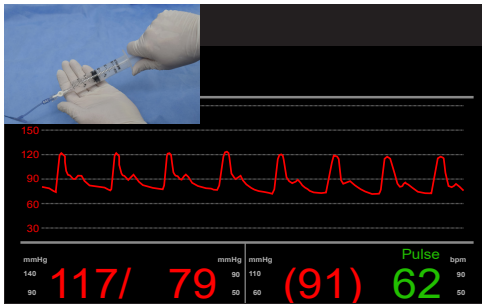

- Deflate slowly, monitor patient's response

Remove Catheter

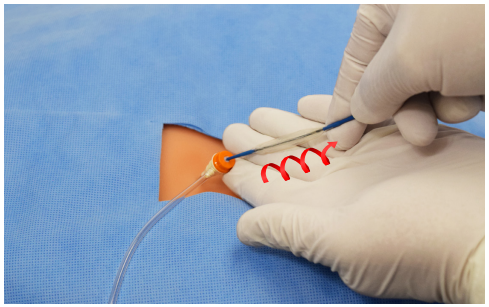

- Fully deflate balloon and hold vacuum for 5 seconds then close stopcock
- Remove catheter

Manage Access Site

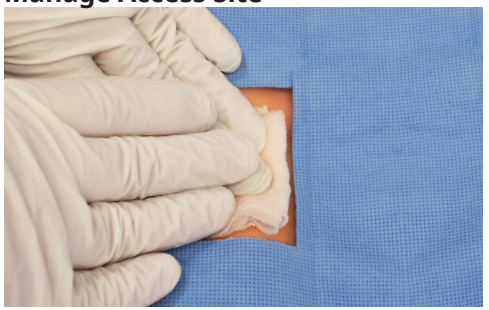

- Remove introducer sheath
- Check for full and equal pulse in each leg

This instruction is not a replacement for the instruction for use (IFU). The ER-REBOA™ PLUS Catheter IFU should be read in its entirety before using the device.

References available at https://prytimemedical.com/clinical/references/

Download our App at Google Play and Apple's App Store